

Copy code remote control Manual

Below is the programming manual

Here is the way of copy

Step:1:Clear the history code from duplicator

- 1:Press button A and B continuously until LED flash 3 times
- 2.Release button B (Keep pressing button A),and press button B Slowly for 3 times,LED flash
- 3.Release button "A",finish code clearance.

Step 2,Copy code from original transmitter

- 1 Put duplicator aside of original transmitter,as close as possible.
- 2 Press and hold button A of original transmitter,then press and hold button A of duplicator until you see the duplicator's LED flash
- 3 Release both buttons,finish code copy,copy other button in same way.

Button A=lock button Button B=unlock button