

SMG-892 Instruction Manual

1. Power supply: 12V-24V AC/DC
2. Frequency: 433.92Mhz
3. Codes: can work with any fixed/learning/rolling codes
4. 2 channel

When power is on, LED lights up for 1 second, receiver is now ready for learning.

1) Code learning for Channel 1

Press P1 (at least 1 second), Led on (1 second), and then goes off (1 second) and on again, now press any button of remote you want to learn. If the code is learned, LED will go off. Then release the button of the remote. If the remote can not read the signal, LED will be on for 10s, and finish learning status.

2) Code learning for Channel 1

Press P1 twice, LED flashes twice and the channel 2 is ready to learn, press the second button of the remote you want to be learn for channel 2, then release the button of the remote. If the code is leaned, the LED will go off, If the remote can not read the signal, LED will be on for 8s, and finish learning status.

3) Code learning for Continuous Output

Press P1 for 3 times, LED flashes 3 times and the channel 1 activates, press any button of the remote you want to be learn, Same way press P1 4 times, LED flashes 4 times and channel 2 activates and then press second button that you want to learn for continuous output.

4) Erasing transmitter's codes

A: Delete one code: Pressing P2 for about 1 second and release, led on, press the button that you want to be deleted.

B: Delete all code: Pressing P2 about 8 seconds, led on, then release P2 button.

5) NOTE

A: Since the date of rolling code is larger, it will take more time to program a remote with rolling code than fixed code.

B: if you learn same code for more than 1 time, only the last code is memorized.

ANT	Antenna
GND	Ground
GND	Ground
VDD	Power Supply
NA	Normally Close Contact (channel 1)
CM	Common Contact (channel 1)
NF	Normally Open Contact (channel 1)
NA	Normally Close Contact (channel 2)
CM	Common Contact (channel 2)
NF	Normally Open Contact (channel 2)
P1	P1 learning button
P2	P2 deleting code button

