



ShenZhen Scimagic Development Technology CO.,Ltd
深圳市森美奇科技发展有限公司

Phone:0086-15217232729/0755-84505252

Email: larissa@scimagic.com.cn

Skype: larissa04191 Website: www.scimagic.com.cn

Adjustable Copy Code Remote Control Specification

Production Description:

- 1) IC chip: Copy code
- 2) Working voltage: 12V
- 3) Working current: 8~10mA
- 4) Frequency: 280mhz-450mhz
- 5) Working power: $\leq 10\text{MW}$
- 6) Working distance: 50-100meters(spacious)
- 7) Static current: 0
- 8) Battery voltage: 27 A
- 9) Modulation: ASK
- 10) $\pm 200\text{KHz}$

This remote is the new super face to face copy remote, it can copy fixed code 280-450mhz remote control Our remote key can copy the following IC chip:

Fixed code: HT-12E, AX5326-3, AX5326-4, AX5026, PT2262, PT2242, PT2240, HT600, HT680, HT6207, HT6010, HT6012, HT6014, MC145026, HT640, EV1527, EV527, PT2260, SMC918 series.

Rolling code: HCS101, HCS200\201 (some pars of code), HCS300\301 (some pars of code), and some part of PIC.

Programming:

1. Use the adjustable frequency pen (photo 2) adjust the switch as photo 1 shows. Need open remote case to adjust it.

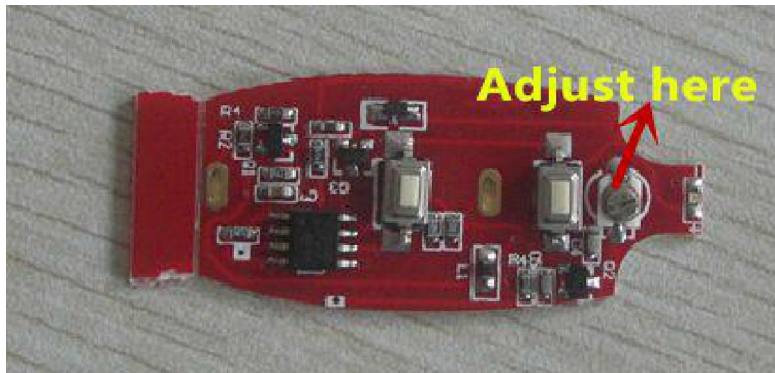


Photo 1



Photo 2

2. Then check the frequency you adjusted on the frequency control by press button

3. After adjust the frequency. Here is the way of duplicate:

Step1: Clear the history code from duplicator

1) Press the 2 buttons at the same time until LED flash 3 times

2) Release second button (Keep pressing first button), and press

second button slowly for 3 times, LED flash 3) Release button two

buttons, finish code clearance.

Step 2: Copy code from original transmitter

1) Put duplicator aside of original transmitter, as close as possible.

2) Press and hold button A of original transmitter, then press and hold button A of duplicator until you see the duplicator's LED flash

3) Release both buttons, finish code copy, copy other button in same way.